

232 INTEGRATED AMPLIFIER

Quick start guide

OPERATION MANUAL AND SAFETY INFORMATION

Burmester

232 INTEGRATED AMPLIFIER

Quick start guide

OPERATION MANUAL AND SAFETY INFORMATION

This operation manual describes how to start up the Burmester 232 integrated amplifier.

The complete manual and more information about the 232 can be found in our media database:



The 232 has a setup assistant that guides you through the set-up process on the device display.



BA_232_short_en_1-1_2311

Burmester Home Audio GmbH
Wilhelm-Kabus-Straße 47
10829 Berlin

Connecting and starting up the 232


Insert all connectors before switching on the 232.

1. Place the 232 on a flat, stable surface. Do not use the 232 outdoors.
2. Connect your analogue source devices to the analogue inputs (blue) of the 232.

Note: In order to play back digital sources, the optional digital module must be installed. To play vinyl records (MC), the optional phono module must be installed.

3. Connect your speaker to the speaker outputs (orange) on the 232 using prefabricated loudspeaker cables with spade lugs. Observe the correct polarity (plus to plus, minus to minus). Make sure that the connections are secure.

Note: The insulation on your selected speaker cable must match that of the original Burmester loudspeaker cable and must have a flame rating of at least VW-1.

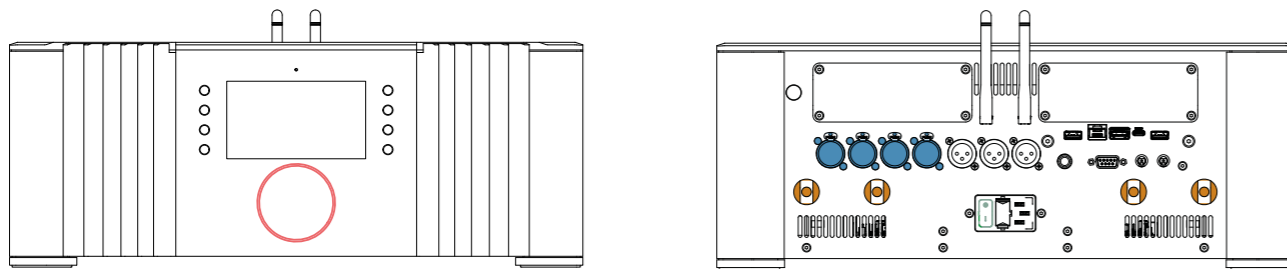

4. Set the mains switch on the rear of the device (green) to “OFF”. Connect the 232 to the mains and set the mains switch to “ON”.
5. Switch the 232 on by pressing the rotary encoder (red).
6. Follow the instructions on the display to select the source.
7. Control the playback volume by turning the rotary encoder (red).

INTENDED USE

The Burmester 232 is intended for use in home music systems.

PERMISSIBLE OPERATING CONDITIONS

Please take care to only ever use your Burmester product under the following conditions:

Maximum altitude: 2000 m
 Humidity < 50%
 Temperature range: 20–30° C

Important information



RISK OF INJURY!

The device is very heavy. Take care when unpacking and setting it up!



RISK OF INJURY AND SUFFOCATION!

The device is not suitable for use by children. Keep the packaging and small parts out of reach of children.



DANGER DUE TO ELECTRIC CURRENT!

Only operate the device on mains with a protective earth conductor. Observe the mains voltage of your country. The externally accessible mains fuse on the rear of the device must only be replaced by authorised personnel. Do not open the device. Do not touch the speaker's binding posts when the device is switched on.



CAUTION! HIGH-INTENSITY SOUND

Loud output signals can damage your hearing. Avoid listening at high volume levels for long periods of time.

TECHNICAL SPECIFICATIONS

Width	450 mm
Height	177 mm
Depth	480 mm
Voltage ranges:	
Model 232-240	220 – 240 V~, 50/60 Hz
Model 232-120	110 – 120 V~, 50/60 Hz
Model 232-100	100 V~, 50/60 Hz
Power consumption	550 W
Weight	27 kg

Subject to technical changes without notice

ERRORS

If the device shows an error during set-up, please contact your dealer.

DISPOSAL

German law stipulates that this device and its accessories must not be disposed of with household waste (grey bin, yellow bin, compost bin, paper or glass). Instead, they must be handed in at municipal collection points or to voluntary recycling programmes.

Burmester

Handmade

BY BURMESTER

Burmester